

# SJ MXT







PRESSURE TRANSMITTER WITH ANALOG OUTPUT

## Pressure Transmitter: Analog Signal Output

Model: MXT

#### **Product Description**

- 4-20mA signal output for remote monitoring
- Digital display which allows local observation at the same time
- LED digital panel with high brightness and a wide viewing angle



#### **Product Specificaion**

#### **Connection location**

**Bottom mount** 

#### **Electrical connection**

2P aviation plug

#### **Nominal size**

2.5"

#### Scale ranges

0 ... 5 kPa to 0 ... 100 MPa, or other equivalent units of pressure, vacuum or compound

#### **Pressure units**

Any units are available

#### **Accuracy**

±1.0% F.S. (standard), ±0.5% F.S.

#### **Process connection**

304 SS (standard), 316 SS 1/4", 3/8", 1/2"; PT, G, NPT

#### Case/Ring

304 SS

#### **Panel**

**PVC** 

#### **Medium temperature**

-35°C ... 60°C

#### **Display**

4 digits



## **Product Specification**

#### **Response time**

Above 5 Hz

### **Voltage supply**

DC16-32V


#### **Output signal**

4-20mA

#### **Protection level**

IP 40

## Dimensions & Key Functions

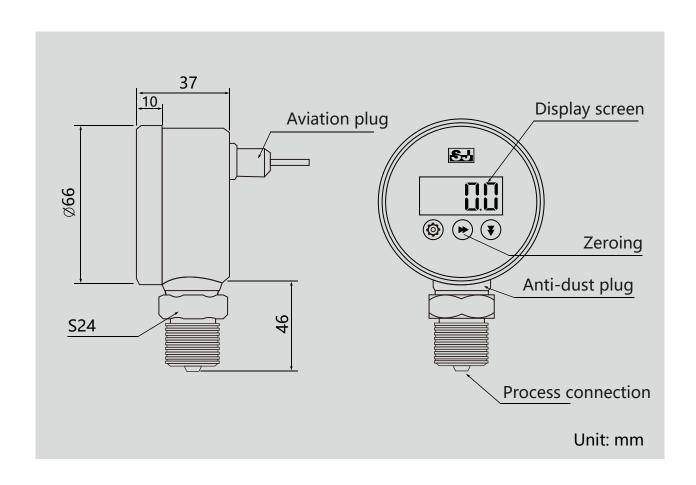


<b>\.</b> /	_		• •	. •
N.	INA	IARIBA	INTO	'Matian
*	OIU	ıerma	HHIOI	mation

Model / Scale range / Accuracy / Process connection / Options


For any changes to the specifications of this catalogue, the latest version shall prevail.



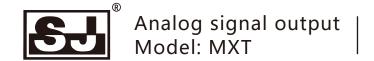

## **Operation Manual**

## Wiring Instruction

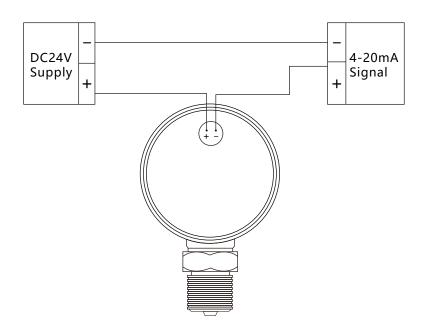

- X Please refer to the label on the rear of the instrument.
- ※ The 4-20mA signal terminal must be connected in series, otherwise the meter will not be powered on.

## How to zero?

Press and hold for 3 seconds.

## FAQ

- 1. If the screen still display the pressure value under the zero pressure state. It is because of the slight error caused by the different atmospheric pressures in various places, which does not affect the normal use. (Please make sure that the instrument is not connected to the pressure pipeline, otherwise it will increase the equipment error.)
- 2. If the output mA number of the device is lower than the normal value. It may be because the power supply voltage has not reached 24V. Please check the power supply equipment.





#### **MEXICO BRANCH OFFICE**

Roberto Diaz No. 401 Ciudad Industrial Aguascalientes, Ags. México 20290

(449) 171 3420 www.4ManPro.com/SPA/



**USA BRANCH OFFICE** Pennzoil Place 700 Milam Suite 1300 Houston, Tx, USA 77002

+1 (832) 871 5022 www.4ManPro.com/ENG/

Aemonto For Manufacturing Processes

For any changes to the specifications of this catalogue, the latest version shall prevail. Copyright © 12/2019 by SIN JIA ENTERPRISE COMPANY LIMITED. All rights reserved.

